6-2D-LM65-012 Rev.00

Ф10.5mm 650nm Laser Module

Power set by user

Features

- 1. APC (auto power control) IC inside
- 2. Low current consumption of the APC circuit
- 3. Surge current protection
- 4. High quality glass lens for output beam
- 5. Fixed focus




Absolute maximum ratings

Item	Symbol	Rating	Unit
Power supply voltage	V_{cc}	3.3	V
Laser Module optical output power	P _o	<3	mW
Operation temperature	T_{opr}	-5~50	°C
Storage temperature	T_{stg}	-20~70	°C

Electrical and optical characteristics (T_c=25 °C)

Item	Symbol	Min.	Тур.	Max	Unit	Condition	
Wavelength	λ	-	655	-	nm	P _o = 3mW	
Operation current	l _{op}	_	-	35	mA	P_o = 3mW V_{cc} =3V	
Operation voltage	$V_{\sf op}$	2.5	-	3.3	Volt		
Laser Beam spot size at 10m	<8mm						
Divergence angle	0.9 mrad						
Mean time to failure (MTTF) 25°C	>10000 hrs						

Outline dimensions (Units: mm)

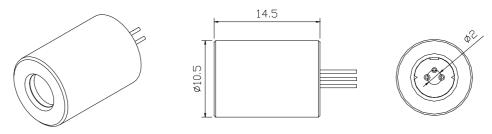

Aperture Size: 5mm


Laser Safety Precautions

- 1. Do not look into the laser beam directly by eyes. The laser beam may cause severe damage to human eyes.
- 2. Optical Lens is made of plastic or glass. Do not contaminate lens by soiling, oil or chemical.




6-2D-LM65-012 Rev.00

PIN Assignment:

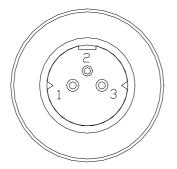

A type: Heat sink stand (-)

Pin 1: Vcc **Pin 2**: GND **Pin 3**: PD

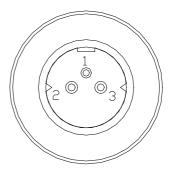

B type :Heat sink stand (+)

R×1衤

Vcc


APC


C×1

Laser power Adjustment Procedure

- Connect 1 uF capacitor (Cx1) between Pin1 and Pin2.
- Connect 20~50K ohm variable resistor (Rx1) between Pin2 and Pin3.
- 3. Set Vcc to the designed value.
- 4. Adjust Rx1 to obtain the desired output power.
- 5. Laser Safety Precautions
 - (1) Do not increase Vcc value when the laser module is working near the maximum power . That is to protect laser from overdriving condition and make sure power is under 3 mW.
 - (2) Do not operate the device above the maximum rating condition, even momentarily. It may cause unexpected permanent damage to the device.

Laser power stability



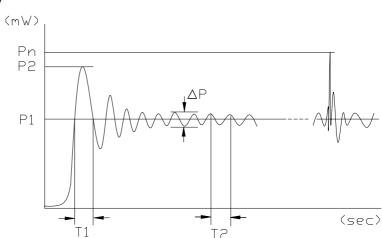

NOTE:

P1: Mean power

P2 : Max power from turning on power

Pn : Max power from Vcc noise ΔP : Power Amplitude of vibration

T1 : Time between trigger and convergence f2=(1/T2) : Frequency of output power

Page 2/2